

HOW TO SET PARENTAL CONTROLS ON YOUR SET TOP BOX

SET A PIN ENTRY

Using your Service Electric remote control, press the blue MENU button twice.

Under the Parental Control menu, scroll to Change PIN, then press OK.

A menu will pop up, prompting you for a four-digit PIN Entry. Follow on-screen instructions.

From the Parental Control menu, you are also able to lock out specific channels, block programs based on ratings, as well as lock channels during a certain time period. You may also hide adult titles, so they may not be seen in the guide and/or info bar.

Note: Be sure to set locking status to ON to enable parental control features.

BLOCK VOD/PPV PURCHASES

Using your Service Electric remote control, press the blue MENU button twice.

Under the Purchasing menu, scroll to Change PIN, then press OK.

A menu will pop up, prompting you for a four-digit PIN Entry. Follow on-screen instructions.

NOTE: This PIN Entry is separate from the PIN used in Parental Controls. Also, to enable blocking, locking status must be turned on.